

IMPACT GLAZING

INSTRUCTIONS FOR FITTING **Quickfix**

YOUR GLASS REQUIREMENT

Measure the glass area, allowing for the pane of glass to overlap the outer frame of the existing window by 10mm all around.

Large glass areas can be divided into panels for convenience of handling and mounting. Each panel must be framed separately, with the glass cut square so that when the top window sits on the one below a tight, draught-proof joint is formed.

Standard Quick-fix channelling will take 24 oz., (3mm), or 32 oz., (4mm) glass. For picture windows, use the larger section of channelling designed to hold 6mm plate glass.


CUTTING & FITTING QUICK-FIX CHANNELLING

Measure all round the edges of the glass, starting and finishing 50mm from the top at the left-hand side (A).


Make a note of the total measurement here.

Cut off length of channelling and accurately mark off the corner points (B), (C), (D), and (E).


Make V-cuts at (B), (C), (D) and (E), using the aluminium mitre-guide tool to obtain the correct angle. Use a very sharp knife or razor blade (a Stanley trimmer knife is recommended) and do not press too hard as this will distort the angle.

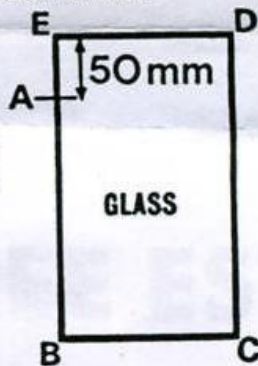

*Do NOT cut right through
the channelling*

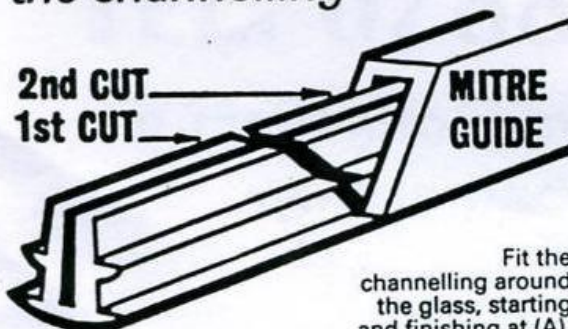

Fit the channelling around the glass, starting and finishing at (A).

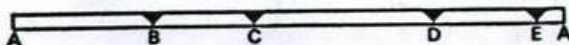

FIXING THE NEW WINDOW IN POSITION

Fix two Quick-fix clips at the bottom of the existing window frame. These should be placed, with the patent number marking outwards, to lie 50mm in from each corner of the new window when it is fitted. Place the new window in position, and mark with a gimlet the positions for the first two side clips (50mm from the top at each side). Remove the new window. Screw these first side clips loosely into place, then fix all the other clips at 300mm - 380mm intervals, according to the area of glass involved.

N.B. The new window will normally be supported by the bottom clips, but if the existing woodwork frame is too shallow, the window can rest on the window sill. (Allow for this in measuring). Clean and polish both the new and existing windows.

Twist the clips so that all hang downwards. Fit the new window into place, turn the clips upwards to hold the window and tighten the screws until the clips can be just turned by hand.

The top left-hand side clip will now form a seal over the ends of the channelling at the join (A).

*Your double-glazing system is now complete -
welcome to the warm world of Quick-fix!*

