


### USING EASYFIX STEP BY STEP

1. Place a mark on the edging strip 5cm from a neat squarely cut end.
2. Lay the edging strip in the channel of the EASYFIX Mitre Gauge so the mark on the edging strip is in the centre of the middle "V". Holding the strip firmly in the two finger grips, cut down each side of the "V" with the sharp knife, being careful not to cut right through the strip.

3. Now carefully fit the edging strip on the glass, the cut out should mould easily around the first corner. Continue along this edge to the next corner and place a mark with the pen on the edging strip where the glass finishes. This point marks the position of the next corner.
4. Repeat steps 2 and 3 until the edging strip is fitted around the pane of glass.
5. You will need a clip about 5cm from each corner on each side, then clips spaced equally about 20-25cm along the remaining distance.
6. Position the sheet carefully so there is an equal overlap on the frame on all four sides.
7. Fix the two clips on the bottom edge 5cm from the corners - these will hold the weight of the sheet.
8. Make sure the glass is clean and the window perfectly dry before resting the pane on the bottom fixing clips. Fix two clips on the top edge, making sure that one of these first four clips covers the join in the edging strip.
9. Now complete the window by fixing the rest of the clips as suggested above.

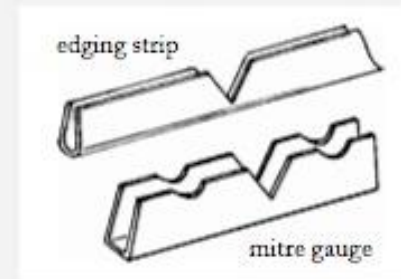

*It is always best to remove double glazing in summer to allow ventilation.*